



## Contents

- Hex key
- Vacuum grease
- Calibration sponge
- Desiccant
- Alcohol wipe
- Battery Cover Connector O-Rings
- Restrictor Seal O-Rings
- Twist-Lock O-Ring
- Sensor Block O-Ring
- RDO® Cap O-Rings
- Battery Cover O-Rings
- Sensor Connector O-Rings



This maintenance kit contains maintenance supplies and spare parts for your Aqua TROLL 700/800. Refer to the user manual for detailed cleaning and calibration procedures.


## 1 Replace desiccant (Aqua TROLL 800 only)



Remove battery cover.



Remove hex key or use the hex key provided with this kit.

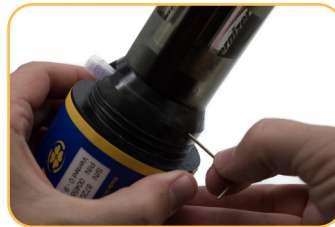

Use hex key to push desiccant out of the slot near the batteries.



Unwrap the fresh desiccant and install it in the instrument. Replace the hex key and battery cover.

## Replacing O-Rings (Aqua TROLL 700)



Replace O-rings when performing routine maintenance. Refer to the diagram below for the location of each O-ring. Replace bumpers when they are visibly worn or damaged.

**Not used:**



Never use metal objects to remove O-rings. They can scratch the plastic and compromise the quality of the seal. If necessary, wood or plastic tools may be used to gently remove O-rings.



Apply a pea-sized amount of grease to each O-ring after installing.

1-970-498-1500

- 1 Twist-Lock O-Ring
- 2 Battery Cover Connector O-Rings (Aqua TROLL 800 only)
- 3 Battery Cover O-Rings (Aqua TROLL 800 only)
- 4 Restrictor Seal O-Rings
- 5 Sensor Block O-Ring
- 6 Sensor Connector O-Rings
- 7 RDO® Cap O-Rings (RDO sensor only)

## Replacing O-Rings (Aqua TROLL 800)



Replace O-rings when performing routine maintenance. Refer to the diagram below for the location of each O-ring. Replace bumpers when they are visibly worn or damaged.



Never use metal objects to remove O-rings. They can scratch the plastic and compromise the quality of the seal. If necessary, wood or plastic tools may be used to gently remove O-rings.



Apply a pea-sized amount of grease to each O-ring after installing.

1-970-498-1500

- 1 Twist-Lock O-Ring
- 2 Battery Cover Connector O-Rings (Aqua TROLL 800 only)
- 3 Battery Cover O-Rings (Aqua TROLL 800 only)
- 4 Restrictor Seal O-Rings
- 5 Sensor Block O-Ring
- 6 Sensor Connector O-Rings
- 7 RDO® Cap O-Rings (RDO sensor only)