

Information Sheet

Catalog No. 52530

LEVEL TROLL MAINTENANCE KIT

Dust Cap

O-ring. To insure a water-tight seal, replace a worn or damaged o-ring:

- Remove and discard damaged o-ring
- Clean o-ring groove on instrument body to remove dirt or residue
- Lubricate new o-ring sparingly (lubricant included in kit)
- Install o-ring in groove and remove any excess lubricant

*Do not allow lubricant to get into the connector.**Use the dust cap to protect the o-ring and connector when cable is not attached.***1 800 446 7488**(toll-free, US and Canada) or 970 498 1500 **www.in-situ.com***Due to continuing product development this information is subject to change without notice. Copyright © 2005 by In-Situ Inc. All rights reserved.*

0052532 07/05

Information Sheet

Catalog No. 52530

LEVEL TROLL MAINTENANCE KIT

Dust Cap

O-ring. To insure a water-tight seal, replace a worn or damaged o-ring:

- Remove and discard damaged o-ring
- Clean o-ring groove on instrument body to remove dirt or residue
- Lubricate new o-ring sparingly (lubricant included in kit)
- Install o-ring in groove and remove any excess lubricant

*Do not allow lubricant to get into the connector.**Use the dust cap to protect the o-ring and connector when cable is not attached.***1 800 446 7488**(toll-free, US and Canada) or 970 498 1500 **www.in-situ.com***Due to continuing product development this information is subject to change without notice. Copyright © 2005 by In-Situ Inc. All rights reserved.*

0052532 07/05