



Use this kit to replace the lift strap on your Rugged Buoy.

### Contents

- Lift strap
- Aluminum lift strap bolts

### Tools & Supplies (Not Included)

- 7/16" wrench

## Installing Lift Strap


### 1 Replace lift strap.



Pull back lift strap to expose bolts. Use a wrench to remove the bolts.



Lift the old strap and hardware away from the base of the buoy.

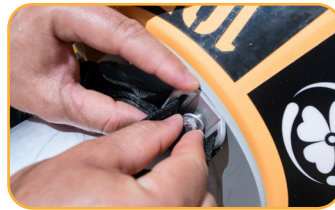

Hold the new strap hardware in place and install bolts.



Tighten bolts with a wrench, and test that the strap is secure.



Use only the hardware provided when replacing parts. Never use steel bolts which can cause galvanic corrosion.

## Learn More

View complete instructions for your Rugged Buoy in the product manual. Download it from [www.in-situ.com](http://www.in-situ.com).