



Fluorescein Water Tracer Sensor



Aqua TROLL 500/600/700/800 Fluorescein Sensor

The In-Situ fluorescein sensor measures fluorescein levels in natural water, surface water, groundwater, produced water and aquaculture applications.

Getting Started

1 Install sensor.



Rinse sensor with clean water before use.



Remove restrictor from the instrument.



Remove sensor port plug if installed.



Lubricate o-ring at bottom of sensor.



Install sensor.




Install restrictor in calibration mode.


2 Calibrate and deploy.



Connect to the instrument with the VuSitu mobile app.

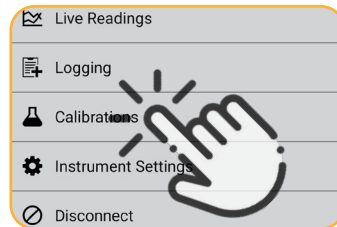

Select Calibrations from the menu.

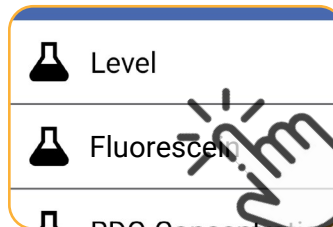

Choose the Fluorescein option and follow the instructions.



Make sure the restrictor is in deployment mode before use.