



Contents

- Hanger
- Hang Screws
- Hex Key


This bail kit allows you to support the weight of your Aqua TROLL 800 for deployment. The bail hanger can keep your Aqua TROLL secured in place for deployments with strong water movement.

Installing Bail Hanger


1 Install hanger.



Remove rubber bumper.

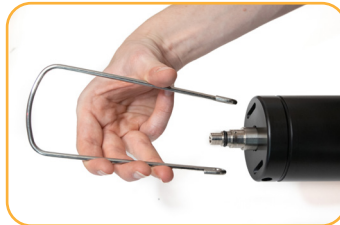

Insert hanger loops into slots on instrument.

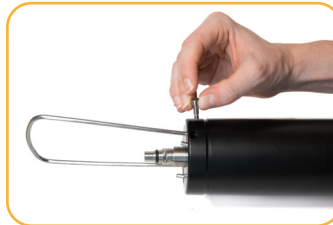

Insert screws into holes on the sides of the instrument.



Tighten screws using the hex key until they are flush.

2 Deploy Instrument.



Slide rubber bumper over hanger and install on instrument.



Hang instrument securely for deployment.



Test that the deployment is secure by moving the instrument around to simulate water movement before leaving it unattended.