

Aqua TROLL® 500 & Aqua TROLL® 600 Weighted Restrictor

Kit part number: 0031350 (includes cap, carabiner and restrictor)


Replacement part numbers: 0036400 (carabiner); 0031330 (restrictor cap); 0031340 (weight)

Attaching the Weighted Restrictor

Application

Use the weighted restrictor to keep the Aqua TROLL 500 or Aqua TROLL 600 multi-parameter sonde at its intended deployment depth in high-flow applications.

1	Restrictor Cap
2	Weight
3	Carabiner

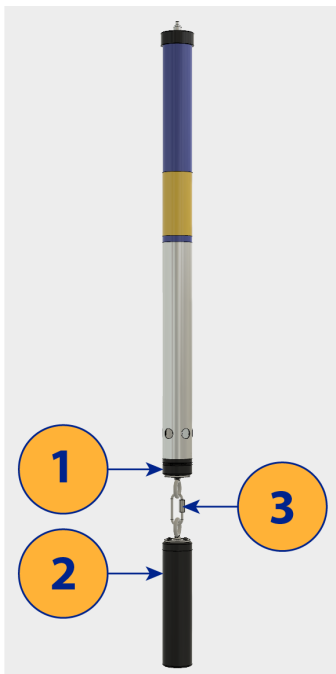

1. Thread the cap onto the restrictor.



2. Connect the carabiner to the restrictor cap's eyelet.



3. Attach the weight and tighten carabiner nut.

