

Aqua TROLL® 500 & Aqua TROLL® 600 Weighted Restrictor


Kit part number: 0031350 (includes cap, carabiner and restrictor)

Replacement part numbers: 0036400 (carabiner); 0031330 (restrictor cap); 0031340 (weight)

Application

Use the weighted restrictor to keep the Aqua TROLL 500 or Aqua TROLL 600 multi-parameter sonde at its intended deployment depth in high-flow applications.

1	Restrictor cap
2	Weight
3	Carabiner

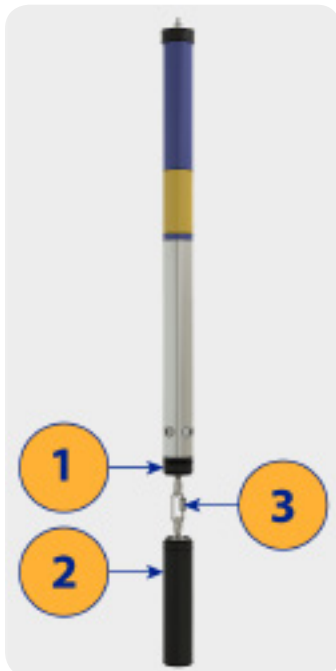

Attaching the Weighted Restrictor

- 1 Thread the cap onto the restrictor.



- 2 Connect the carabiner to the restrictor cap's eyelet.



- 3 Attach the weight and tighten carabiner nut.

